




# EXPLOZIE PIESE DE SCHIMB SC6000 LITE




A. FGP2500 whole machines

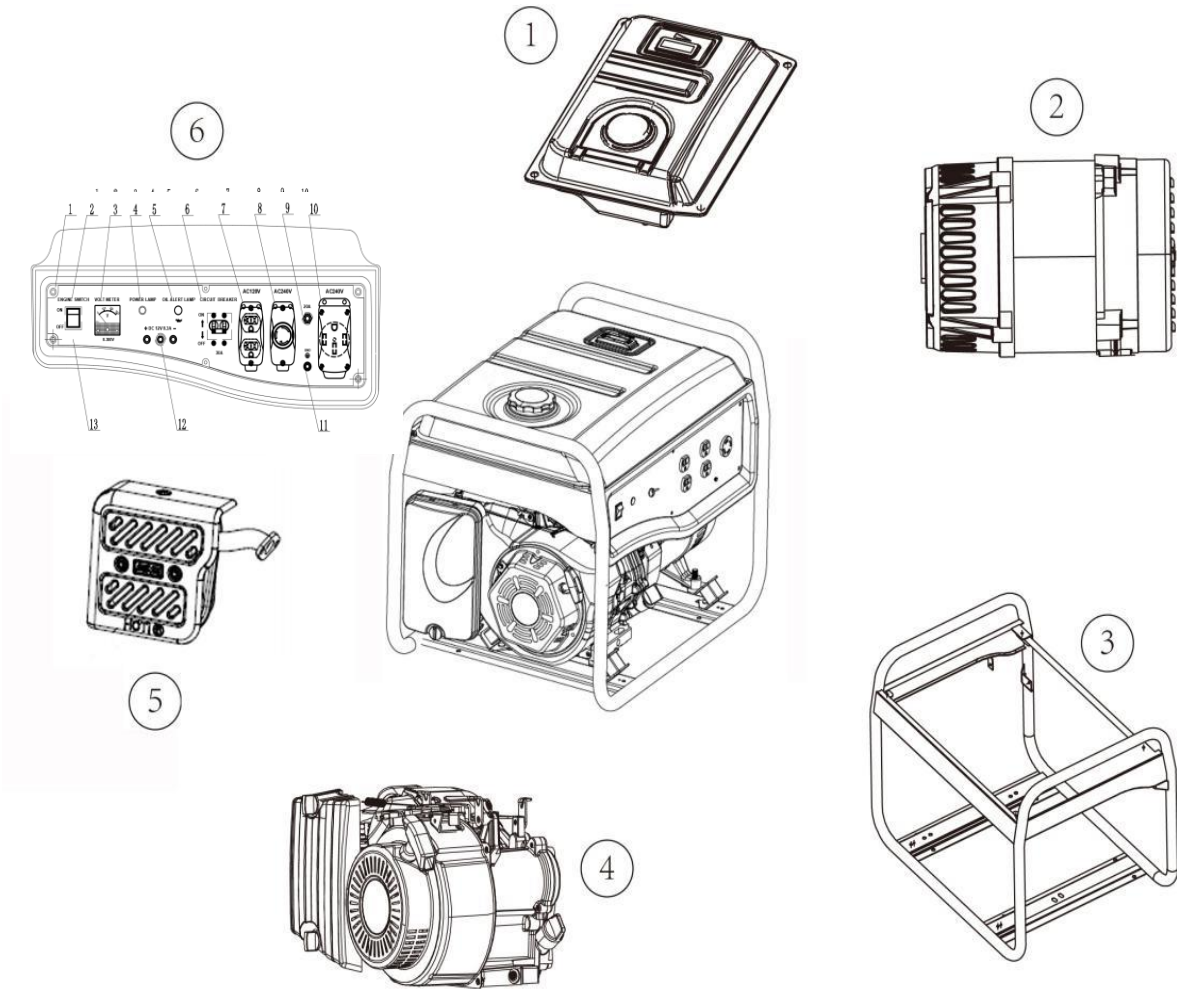


| NO. | NO. | Part No.       |  | English                | quantity |
|-----|-----|----------------|--|------------------------|----------|
| A   | 1   | 20130-00115-01 |  | Fuel tank assembly     | 1        |
| A   | 2   | 20029-09115-00 |  | Alternator assembly    | 1        |
| A   | 3   | 20090-01181-00 |  | Frame assembly         | 1        |
| A   | 4   | 20260-03594-00 |  | Engine assembly        | 1        |
| A   | 5   | 20202-00203-01 |  | Muffler assembly       | 1        |
| A   | 6   | 20114-03451-00 |  | Control panel assembly | 1        |
|     |     |                |  |                        |          |

## B. fuel tank

| NO. | NO. | Part No.       |                      |          |
|-----|-----|----------------|----------------------|----------|
|     |     |                | English              | quantity |
| B   | 1   | \              | Fuel tank cover      | 1        |
| B   | 2   | \              | Fuel filter          | 1        |
| B   | 3   | \              | Oil leveler          | 1        |
| B   | 4   | 30101-00407-02 | Flange bolt          | 4        |
| B   | 5   | 30136-00074-01 | Fuel tank washer     | 4        |
| B   | 6   | \              | Bushing              | 4        |
| B   | 7   | \              | Fuel tank rubber mat | 1        |
| B   | 8   | 20133-00002-00 | Fuel valve           | 1        |
| B   | 9   | 34024-00002-00 | Clamp                | 1        |
| B   | 10  | 34023-00004-00 | Fuel pipe            | 0.18M    |
|     |     |                |                      |          |

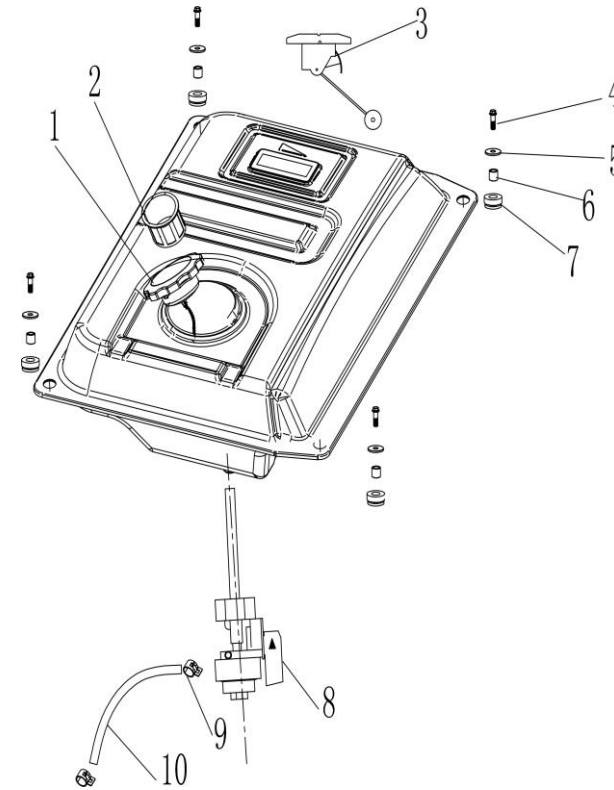


## C. alternator

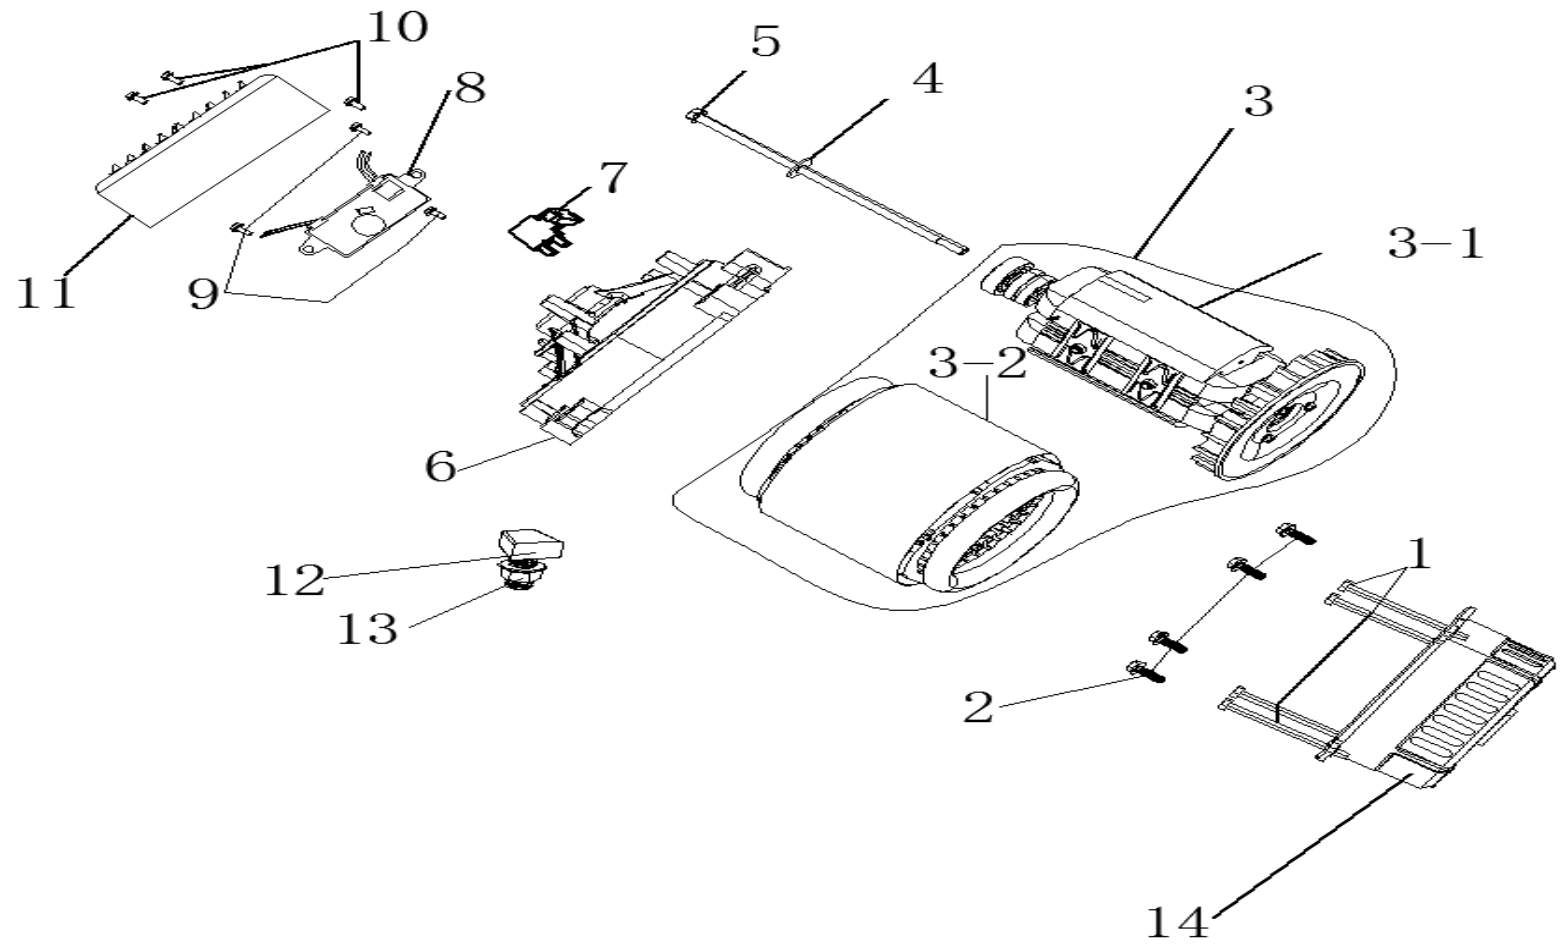

| NO. | NO. | Part No.       | Description |                      |          |
|-----|-----|----------------|-------------|----------------------|----------|
|     |     |                |             | English              | quantity |
| C   | 1   | 30101-00436-00 |             | Flange bolt          | 4        |
| C   | 2   | \              |             | Flange bolt          | 0        |
| C   | 3   | 20029-09115-00 |             | Alternator assy      | 1        |
| C   | 3-1 | 2026-01799-00  |             | Rotor                | 1        |
| C   | 3-2 | 20046-06085-00 |             | Stator               | 1        |
| C   | 4   | 30136-00025-00 |             | Plain washer         | 1        |
| C   | 5   | 30101-00287-00 |             | Flange bolt          | 1        |
| C   | 6   | 33085-00058-00 |             | Alternator bracket   | 1        |
| C   | 7   | 20183-00015-00 |             | Carbon brush         | 1        |
| C   | 8   | 20044-00015-00 |             | Voltage regulator    | 1        |
| C   | 9   | 30101-00275-01 |             | Flange bolt          | 5        |
| C   | 10  | 30101-00274-01 |             | Flange bolt          | 3        |
| C   | 11  | 33082-00156-00 |             | Alternator end cover | 1        |
| C   | 12  | \              | \           | \                    | \        |
| C   | 13  | \              | \           | \                    | \        |
| C   | 14  | \              | \           | \                    | \        |
|     |     |                |             |                      |          |

## D. frame


| NO. | NO. | Part No.       |                       |          |
|-----|-----|----------------|-----------------------|----------|
|     |     |                | English               | quantity |
| D   | 1   | 20090-01181-00 | Frame components      | 1        |
| D   | 2   | 34030-00034-01 | Shock absorbing mount | 2        |
| D   | 3   | 34030-00034-01 | Shock absorbing mount | 2        |
| D   | 4   | 30125-00026-01 | Flange nut            | 4        |
| D   | 5   | 20196-00122-01 | Ground wire           | 1        |
| D   | 6   | 30101-00398-00 | Flange bolt           | 1        |
| D   | 7   | 33301-00010-01 | Wave spring           | 1        |
| D   | 8   | 30125-00019-01 | Flange nut            | 1        |
| D   | 9   | 34030-00009-01 | Shock pad             | 1        |
| D   | 10  | 34030-00058-01 | Shock pad             | 4        |
| D   | 11  | 30101-00398-00 | Flange bolt           | 4        |
|     |     |                |                       |          |

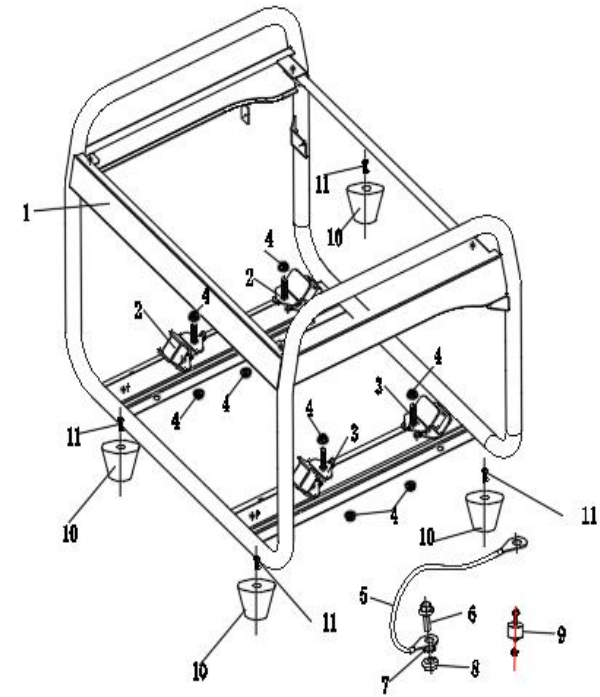

## E.Engine


### E-01 . Cylinder head

| NO.  | NO. | Part No.       | English             | quantity |
|------|-----|----------------|---------------------|----------|
| E-01 | 1   | 33580-00014-01 | BOLT, M6×60         | 1        |
| E-01 | 2   | 20021-00004-01 | COVER COMP. HEAD    | 1        |
| E-01 | 3   | 33048-00034-00 | GASKET,HEAD COVER   | 1        |
| E-01 | 4   | 30101-00506-01 | BOLT                | 4        |
| E-01 | 5   | 30110-00027-01 | BOLT, STUD, EXHAUST | 2        |
| E-01 | 6   | 20027-00011-00 | SPARK PLUG          | 1        |
| E-01 | 7   | 34006-00007-00 | DOWEL PIN           | 2        |
| E-01 | 8   | 33048-00034-00 | GASKET,HEAD COVER   | 1        |
| E-01 | 9   | 30110-00021-01 | BOLT, STUD, INTAKE  | 2        |
| E-01 | 10  | 20023-00061-00 | CYLINDER HEAD COMP  | 1        |
| E-01 | 11  | 34021-00001-01 | WIND COVER, DOWN    | 1        |
| E-01 | 12  | 30101-00070-00 | BOLT                | 1        |
| E-01 | 13  | 34023-00021-01 | TUBE, BREATHER      | 1        |
|      |     |                |                     |          |

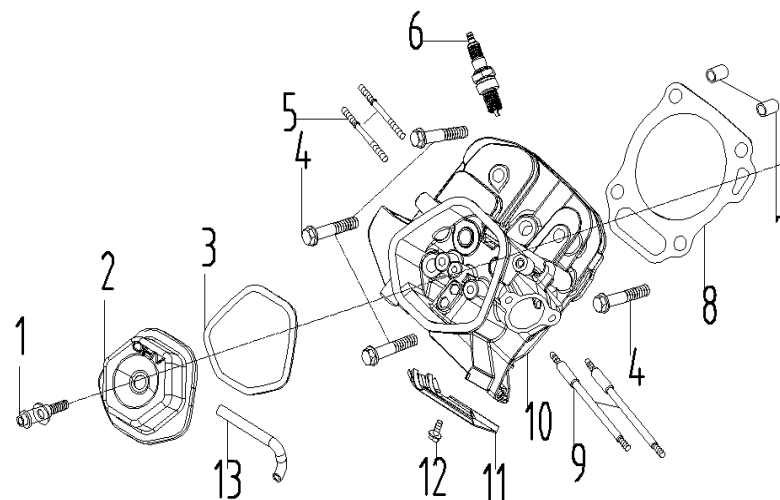


## E-02 Crankcase assy

| NO.  | NO. | Part No.       |                   |          |
|------|-----|----------------|-------------------|----------|
|      |     |                | English           | quantity |
| E-02 | 1   | 30101-00342-00 | BOLT              | 2        |
| E-02 | 2   | 33247-00027-01 | ENGINE OIL SENSOR | 1        |
| E-02 | 3   | 30141-00112-00 | BEARING           | 1        |
| E-02 | 4   | 34007-00002-01 | OIL SEAL          | 1        |
| E-02 | 5   | 34006-00017-00 | PIN, LOCK         | 1        |
| E-02 | 6   | 30136-00097-00 | WASHER            | 1        |
| E-02 | 7   | 34026-00005-01 | SHAFT, GOVERNOR   | 1        |
| E-02 | 8   | 34011-00017-00 | CRANKCASE         | 1        |
| E-02 | 9   | /              | START MOTOR       | 1        |
| E-02 | 10  | /              | BOLT              | 2        |
| E-02 | 11  | /              | CHARGING COIL     | 1        |
| E-02 | 12  | /              | CRIMPING BOARD    | 1        |
| E-02 | 13  | /              | BOLT              | 1        |
| E-02 | 14  | /              | BOLT              | 2        |
| E-02 | 15  | 34007-00012-00 | OIL SEAL          | 1        |
| E-02 | 16  | 30136-00080-01 | WASHER            | 2        |
| E-02 | 17  | 30101-00514-01 | BOLT              | 2        |
|      |     |                |                   |          |

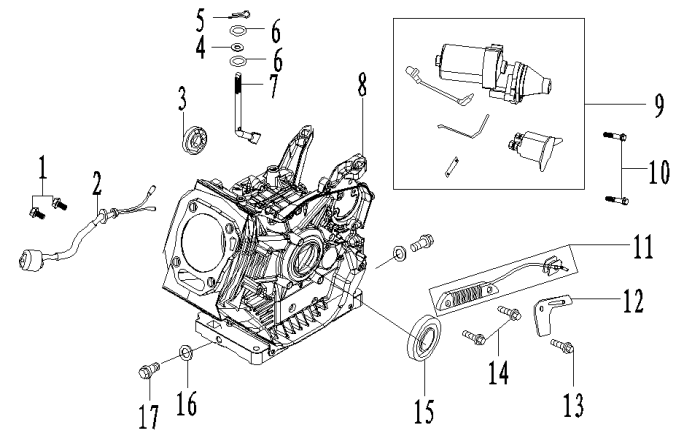


## Crankcase cover

| NO.  | NO. | Part No.       | English                 | quantity |
|------|-----|----------------|-------------------------|----------|
| E-03 | 1   | 34007-00012-01 | OIL SEAL                | 1        |
| E-03 | 2   | 30101-00370-00 | BOLT                    | 7        |
| E-03 | 3   | 20026-00004-02 | DIPSTICK ASSY           | 1        |
| E-03 | 4   | 33129-00016-00 | CRANKCASE COVER         | 1        |
| E-03 | 5   | 20013-00004-01 | GOVERNOR GEAR KIT       | 1        |
| E-03 | 6   | 30141-00112-00 | BEARING                 | 1        |
| E-03 | 7   | 30141-00116-00 | BEARING                 | 1        |
| E-03 | 8   | 33048-00063-00 | GASKET, CRANKCASE COVER | 1        |
| E-03 | 9   | 34006-00001-00 | DOWEL PIN               | 2        |
|      |     |                |                         |          |

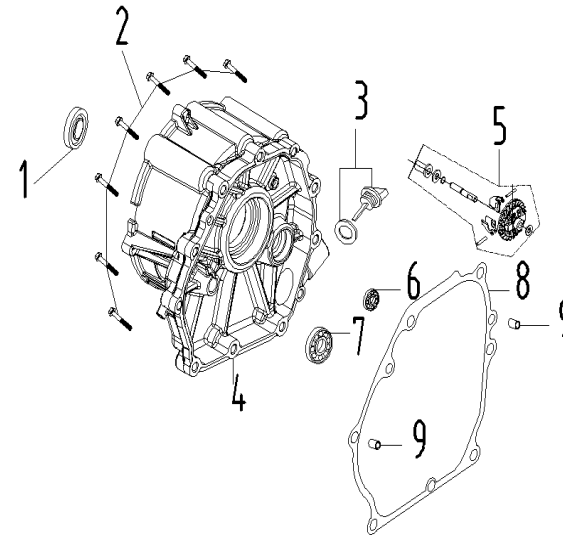


## E-04 Crankshaft piston

| NO.  | NO. | Part No.       |                     |          |
|------|-----|----------------|---------------------|----------|
|      |     |                | English             | quantity |
| E-04 | 1   | 20084-00007-00 | RING SET, PISTON    | 1        |
| E-04 | 2   | 30150-00023-00 | CLIP, PISTON PIN    | 2        |
| E-04 | 3   | 34004-00014-00 | PISTON              | 1        |
| E-04 | 4   | 34006-00015-00 | PIN, PISTON         | 1        |
| E-04 | 5   | 20008-00007-00 | CONNECTING ROD ASSY | 1        |
| E-04 | 6   | 20011-00041-00 | CRANKSHAFT ASSY     | 1        |
|      |     |                |                     |          |

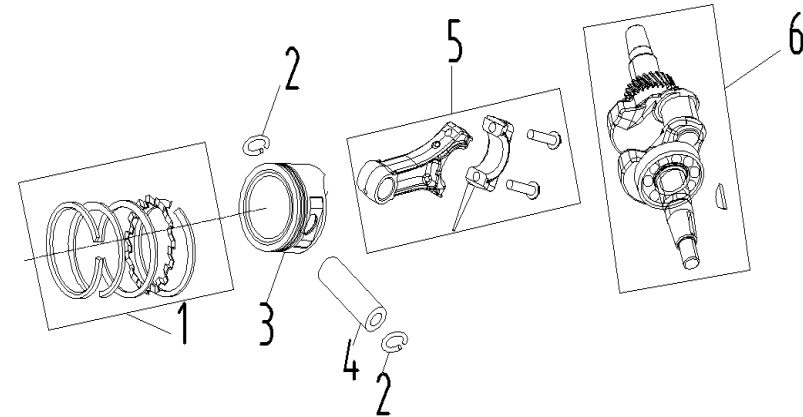


## E-05 Camshaft

| NO.  | NO. | Part No.       |                        |          |
|------|-----|----------------|------------------------|----------|
|      |     |                | English                | quantity |
| E-05 | 1   | /              | NUT, VALVE ADJUSTING   | 2        |
| E-05 | 2   | /              | ROCKER SHAFT           | 2        |
| E-05 | 3   | 34019-00075-01 | ROCKER ARM             | 2        |
| E-05 | 4   | /              | BOLT VALVE             | 2        |
| E-05 | 5   | 34017-00008-00 | PLATE, PUSH ROD GUIDE  | 1        |
| E-05 | 6   | 34016-00009-00 | ROTATOR, VALVE         | 4        |
| E-05 | 7   | 34016-00162-00 | RETAINER, VALVE SPRING | 2        |
| E-05 | 8   | 34015-00023-00 | SPRING, VALVE          | 2        |
| E-05 | 9   | 34016-00008-00 | RETAINER, VALVE BOTTOW | 2        |
| E-05 | 10  | 34018-00001-00 | OIL SEAL               | 1        |
| E-05 | 11  | 34013-00034-00 | VALVE, EXHAUST         | 1        |
| E-05 | 12  | 34013-00080-00 | VALVE, INTAKE          | 1        |
| E-05 | 13  | 34020-00010-00 | PUSH ROD               | 2        |
| E-05 | 14  | 34008-00006-00 | LIFTER, VALVE          | 2        |
| E-05 | 15  | 20012-00017-00 | CAMSHAFT, ASSY         | 1        |
| E-05 | 16  | 34033-00001-00 | BALANCE SHAFT          | 1        |
|      |     |                |                        |          |

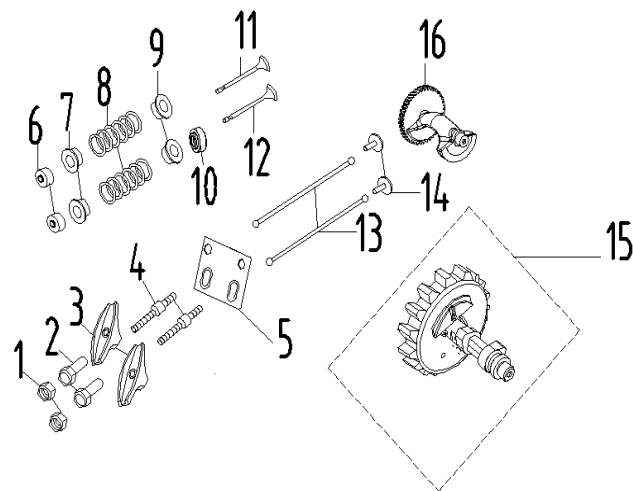


E-06 Carburetor

| NO.  | NO. | Part No.       |                       |            |
|------|-----|----------------|-----------------------|------------|
|      |     |                | English               | quantity   |
| E-06 | 1   | 33048-00053-00 | GASKET,INTAKE         | 1          |
| E-06 | 2   | 34012-00014-01 | INSULATOR, CARBURETOR | 1          |
| E-06 | 3   | 33048-00078-00 | GASKET,CARBURETOR     | 1          |
| E-06 | 4   | 20024-00085-00 | CARBURETOR            | 1          |
| E-06 | 5   | 33048-00047-00 | GASKET,AIR CLEANER    | 1          |
| E-06 | 6   | 34024-00002-00 | CLIP,FUEL PIPE        | 1          |
| E-06 | 7   | 34023-00004-01 | FUEL PIPE             | 0.390<br>m |
| E-06 | 8   | 34024-00009-01 | CLIP,FUEL PIPE        | 1          |
| 总值   |     |                |                       |            |

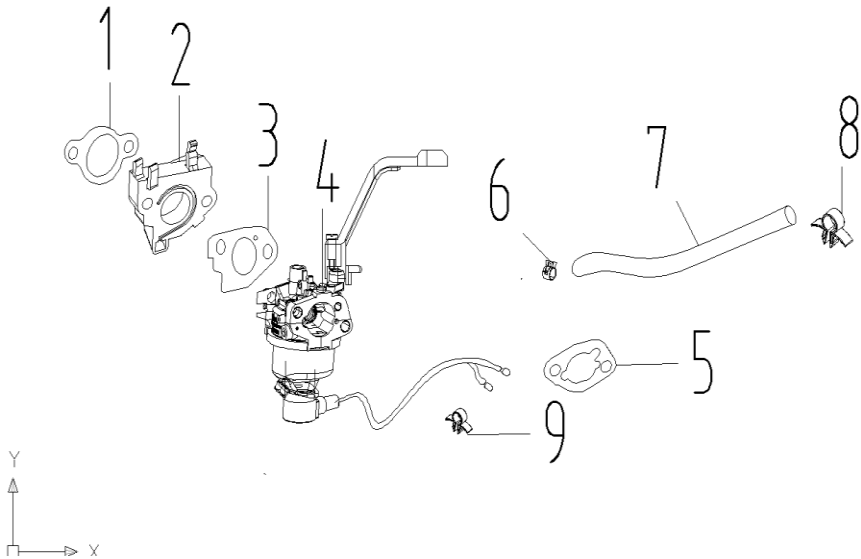


## E-07 Recoil starter

| NO.  | NO. | Part No.       | English               | quantity |
|------|-----|----------------|-----------------------|----------|
| E-07 | 1   | 30101-00070-01 | BOLT, M6×12           | 5        |
| E-07 | 2   | /              | WIND GUIDER, RECOIL   | 1        |
| E-07 | 3   | /              | BOLT, FLANGE          | 3        |
| E-07 | 4   | /              | RECOIL STARTER PULLER | 1        |
| E-07 | 5   | 20010-00069-01 | RECOIL STARTER COMP   | 1        |
| 总值   |     |                |                       |          |

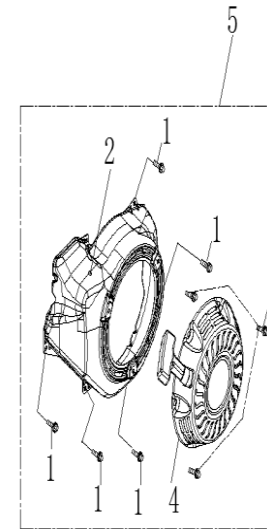


## E-08 Control

| NO.  | NO. | Part No.       |                         |          |
|------|-----|----------------|-------------------------|----------|
|      |     |                | English                 | quantity |
| E-08 | 1   | 30101-00070-00 | BOLT                    | 2        |
| E-08 | 2   | 20022-00036-01 | SPEED CONTROL, ASSY     | 1        |
| E-08 | 3   | 34015-00020-01 | SPRING, CABLE RETURN    | 1        |
| E-08 | 4   | 34015-00010-00 | SPRING, THROTTLE RETURN | 1        |
| E-08 | 5   | 34026-00008-01 | ROD, GOVERNOR           | 1        |
| E-08 | 6   | 34025-00007-01 | HANDLE, SPEED CONTROL   | 1        |
|      |     |                |                         |          |

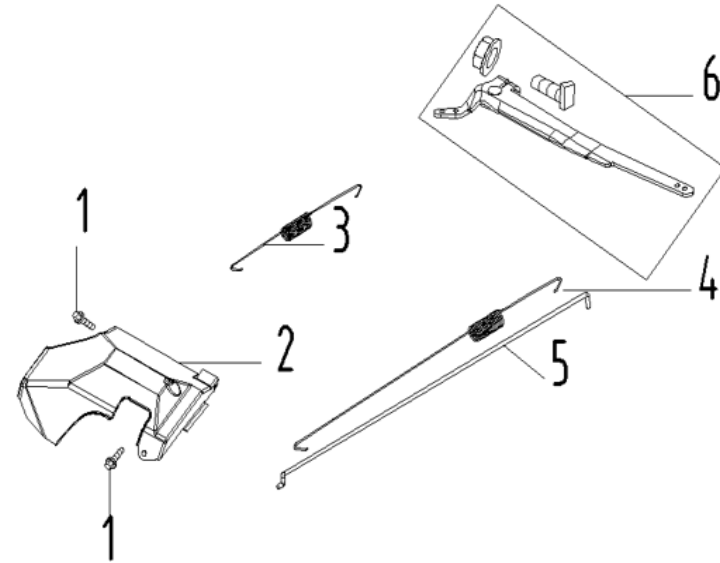


## E-09 Flywheel

| NO.  | NO. | Part No.       | English             | quantity |
|------|-----|----------------|---------------------|----------|
| E-09 | 1   | 20028-00030-01 | WIRE, ENGINE SWITCH | 1        |
| E-09 | 2   | 30101-00408-00 | BOLT, FLANGE        | 2        |
| E-09 | 3   | 33099-00047-00 | FLYWHEEL COMP       | 1        |
| E-09 | 4   | 33155-00042-01 | FAN COOLING         | 1        |
| E-09 | 5   | 34022-00028-01 | PULLEY, STARTER     | 1        |
| E-09 | 6   | 30125-00035-00 | NUT SPECIAL         | 1        |
| E-09 | 7   | 33246-00003-01 | OIL ALARM           | 1        |
| E-09 | 8   | 30101-00070-00 | BOLT, FLANGE        | 1        |
|      |     |                |                     |          |

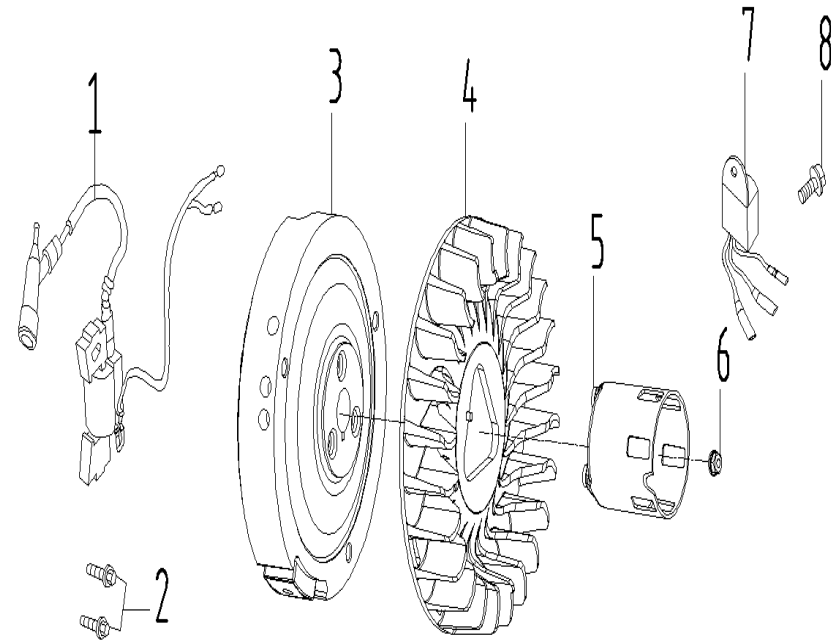


## E-10 Air cleaner

| NO.  | NO. | Part No.       | English                   | quantity |
|------|-----|----------------|---------------------------|----------|
| E-10 | 1   | 30125-00002-00 | BOLT, FLANGE              | 2        |
| E-10 | 2   | /              | ELEMENT ASSY, AIR CLEANER | 2        |
| E-10 | 3   | /              | COVER, AIR CLEANER        | 1        |
| E-10 | 4   | /              | BOLT, FLANGE              | 6        |
| E-10 | 5   | /              | SUPPORT, ELEMENT          | 1        |
| E-10 | 6   | /              | BASE COMP,AIR CLEANER     | 1        |
| E-10 | 7   | 20025-00083-01 | AIR CLEANER ASSY          | 1        |
| E-10 | 8   | 33015-00039-01 | SLEEVE, FUEL PIPE         | 1        |
|      |     |                |                           |          |

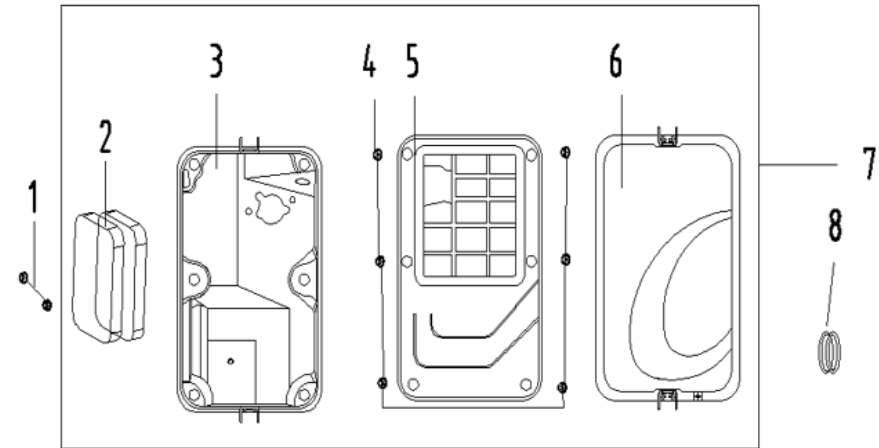


# F.muffler

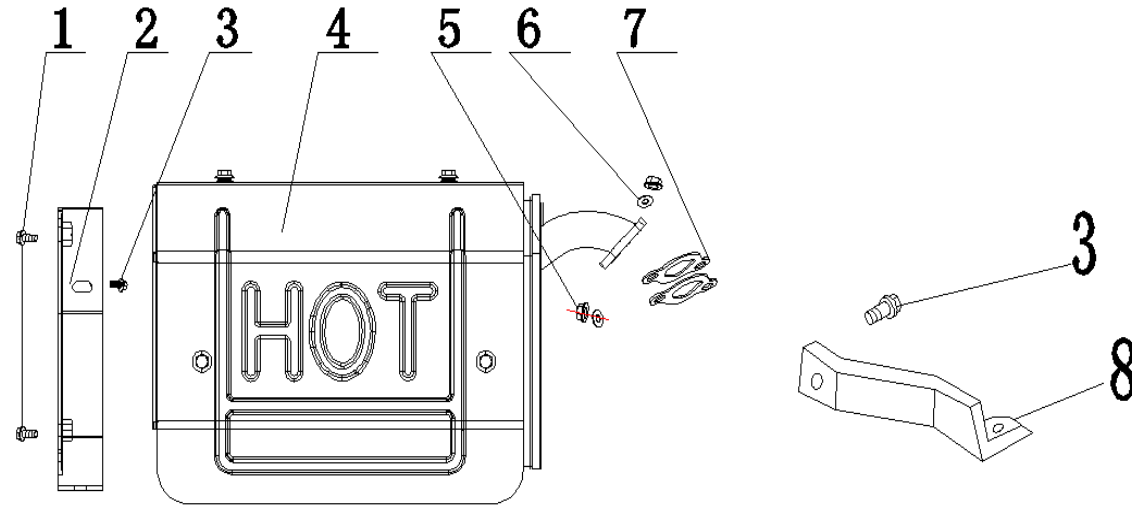

| NO. | NO. | Part No.       | Desription |                         |          |
|-----|-----|----------------|------------|-------------------------|----------|
|     |     |                |            | English                 | quantity |
| F   | 1   | 30101-00355-01 |            | Flange bolt             | 1        |
| F   | 2   | 33004-00017-01 |            | Support part            | 2        |
| F   | 3   | 30101-00355-01 |            | Flange bolt             | 2        |
| F   | 4   | 20202-00203-01 |            | Muffler                 | 1        |
| F   | 5   | 30121-00041-00 |            | Hex nut                 | 2        |
| F   | 6   | 30139-00038-00 |            | Spring washer           | 1        |
| F   | 7   | 33048-00093-00 |            | Muffler washer          | 1        |
| F   | 8   | 33499-00016-01 |            | Air cleaner support     | 1        |
| F   | 9   | 33048-00093-00 |            | Muffler washer          | 1        |
| F   | 10  | 33339-00023-01 |            | Muffler connecting pipe | 1        |
|     |     |                |            |                         |          |

## G.Control panel

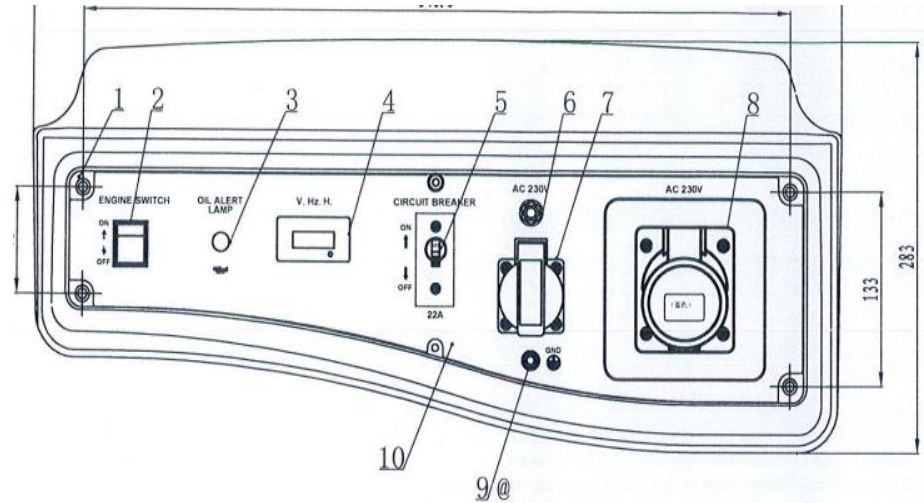

| NO. | NO. | Part No.       | Description |                       |          |
|-----|-----|----------------|-------------|-----------------------|----------|
|     |     |                |             | English               | quantity |
| G   | 1   | 20114-03451-00 |             | Control panel assembl | 1        |
| G   | 2   | 31026-00139-00 |             | Switch                | 1        |
| G   | 3   | 20270-00003-00 |             | Oil camp              | 1        |
| G   | 4   | 31008-00051-00 |             | Voltmeter             | 1        |
|     | 5   | 31037-00044-00 |             | Circuit breaker       | 1        |
| G   | 6   | 31038-00024-00 |             | Thermal protection    | 1        |
| G   | 7   | 31034-00023-01 |             | Socket                | 1        |
| G   | 8   | 31034-00077-01 |             | Socket                | 1        |
|     | 9   | 70009-00396-00 |             | Grounding terminal    | 1        |
| G   | 10  | 32001-00851-00 |             | Panel decal           | 1        |
|     |     |                |             |                       |          |